


LightViper
FIBER OPTIC AUDIO SNAKE

USER MANUAL FOR
VIM-1808 / 0808

Warning for Your Protection

1. Read these instructions
2. Keep these instructions
3. Heed all warnings
4. Follow all instructions
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

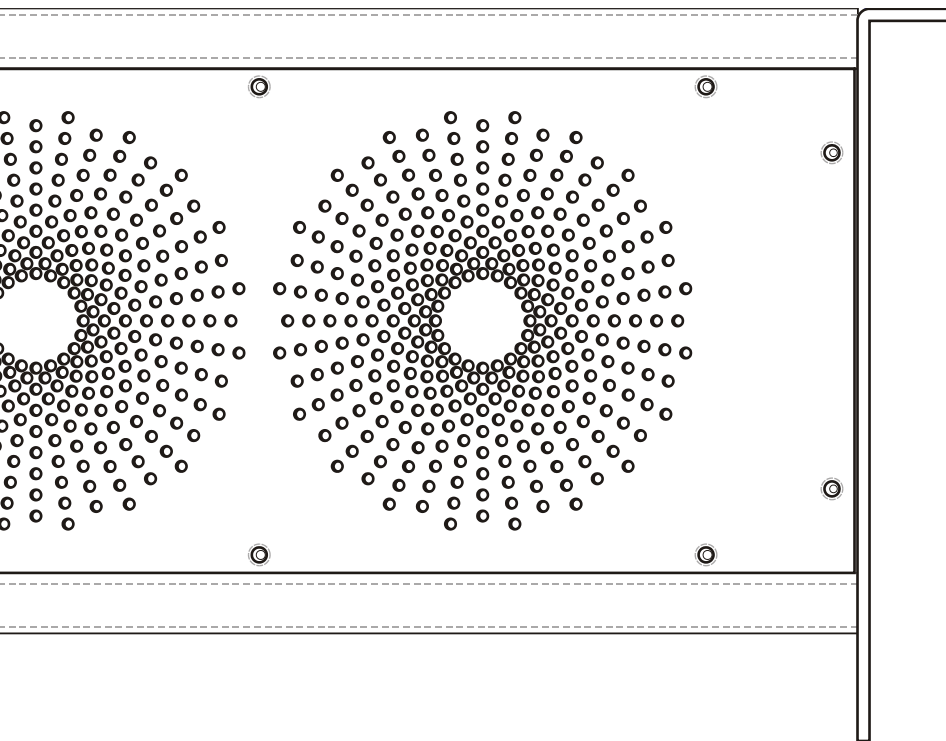

The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

“WARNING To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.”

General Installation Instructions

Please consider besides these general instructions also any product-specific instructions in the “Installation” chapter of this manual.

Unpacking

Check the equipment for any transport damage. If the unit is mechanically damaged, if liquids have been spilled or if objects have fallen into the unit, it must not be connected to the AC power outlet, or it must be immediately disconnected by unplugging the power cable. Repair must only be performed by trained personnel in accordance with the applicable regulations.

Installation Site

Install the unit in a place where the following conditions are met:

- The temperature and the relative humidity of the environment must be within the specified limits during operation of the unit. Relevant values are the ones at the air inlets of the unit.
- Condensation must be avoided. If the unit is installed in a location with large variation of ambient temperature (e.g. in an OB-van), appropriate precautions must be taken before and after operation.
- Unobstructed air flow is essential for proper operation. Air vents of the unit are a functional part of the design and must not be blocked in any way during operation (e.g. by objects placed upon them, placement of the unit on a soft surface, or installation of the unit within a rack or piece of furniture).
- The unit must not be heated up by external sources of heat radiation (sunlight, spot lights).

Ambient Temperature

Units and systems by LightViper are generally designed for an ambient temperature range (i.e. temperature of the incoming air) of +5...+40 °C. When rack mounting the units, the following facts must be considered:

- The admissible ambient temperature range for operation of the semiconductor components is 0 °C to +70 °C (commercial temperature range for operation).
- The air flow through the installation must provide that the outgoing air is always cooler than 70 °C.
- Average heat increase of the cooling air shall be about 20 K, allowing for an additional maximum 10 K increase at the hot components.
- In order to dissipate 1 kW with this admissible average heat increase, an air flow of 2.65 m³/min is required.
*Example: A rack dissipating $P = 800 \text{ W}$ requires an air flow of $0.8 * 2.65 \text{ m}^3/\text{min}$ which corresponds to $2.12 \text{ m}^3/\text{min}$.*
- If the cooling function of the installation must be monitored (e.g. for fan failure or illumination with spot lamps), the outgoing air temperature must be measured directly above the modules at several places within

Earthing and Power Supply

Earthing of units with mains supply (class I equipment) is performed via the protective earth (PE) conductor integrated in the mains cable. Units with battery operation (< 60 V, class III equipment) must be earthed separately. Earthing the unit is one of the measures for protection against electrical shock hazard (dangerous body currents). Hazardous voltage may not only be caused by defective power supply insulation, but may also be introduced by the connected audio or control cables.

This equipment may require the use of a different line cord, attachment plug, or both, depending on the available power source at installation. If the attachment plug needs to be changed, refer servicing to qualified service personnel

If your unit mains supply is provided via a Neutrik PowerCon™ connector the following precautions must be followed:

- The PowerCon must be installed and fully engaged before AC power is applied to the unit.
- The unit must be disconnected from the mains supply before disengaging the PowerCon connector.

Class I Equipment (Mains Operation)

Should the equipment be delivered without a matching mains cable, the latter has to be prepared by a trained person using the attached female plug (IEC320/C13 or IEC320/C19) with respect to the applicable regulations in your country.

Before connecting the equipment to the AC power outlet, check that the local line voltage matches the equipment rating (voltage, frequency) within the admissible tolerance. The equipment fuses must be rated in accordance with the specifications on the equipment.

Equipment supplied with a 3-pole appliance inlet (protection conforming to class I equipment) must be connected to a 3-pole AC power outlet so that the equipment cabinet is connected to the protective earth.

WARNING

If the ground is defeated, certain fault conditions in the unit or in the system to which it is connected can result in full line voltage between chassis and earth ground. Severe injury or death can then result if the chassis and earth ground are touched simultaneously.

Registration

Be sure to register your LightViper product, either by filling in the enclosed Registration Card or by completing the on-line registration form at our Web site:

<http://lightviper.com/register.aspx>

If you do so, FiberPlex can contact you with any update information. As enhancements and upgrades are developed, you will be contacted at the registration address. Please read this manual - if you call for technical support, we'll assume that you have.

Please address any inquiries to your dealer or directly to FiberPlex at:

FiberPlex Inc.
10840-412 Guilford Rd.
Annapolis Junction, MD 20701
301.604.0100 Fax: 301.604.0773
sales@fiberplex.com

Limited Lifetime Warranty (US Domestic Only)

FiberPlex products are warranted against defects in material and workmanship for their lifetime. This warranty covers the original purchaser only and is not transferable. The lifetime of a product is defined as the period during which the product is manufactured, or can be repaired.

FiberPlex will, at its discretion, repair or replace a defective product.

FiberPlex warrants that its software and firmware, designed by FiberPlex for use with an instrument will execute its programming instructions when properly installed on that instrument. FiberPlex does not warrant that the operation of the instrument, the software, or the firmware will be uninterrupted or error free. FiberPlex's products are not authorized for use as critical components in life support devices or systems without the express written approval of the president of FiberPlex, Inc.

This warranty does not cover damage from acts of God, accident, abuse, neglect, contamination, unauthorized modification or misuse, operation outside of the environmental specifications for the product, improper site preparation or maintenance, or abnormal conditions of handling. This would include over-voltage failures, and conditions outside of the products specified ratings, problems with buyer-supplied software or interfacing, or normal wear and tear of mechanical components.

To return a defective product, please contact our Sales Department for a Return Materials Authorization number (RMA), by calling 301-604-0100, or email: Sales@fiberplex.com Failure to properly package and protect the product during shipping may void this warranty. The RMA number must be written on the outside of the carton. We cannot accept delivery of any equipment that is sent to us without an RMA number. The Buyer shall prepay shipping charges to FiberPlex, and FiberPlex shall pay the return shipping charges.

The remedies provided herein are the buyer's sole and exclusive remedies. FiberPlex shall not be liable for any direct, indirect, special, incidental, or consequential damages.

Service

The LightViper equipment contains no user-serviceable components: refer to qualified service personnel for repair or upgrade. Your warranty will be voided if you tamper with the internal components. If you have any questions with regard to the above, please contact FiberPlex.

In the event your LightViper equipment needs to be upgraded or repaired, it is necessary to contact FiberPlex prior to shipping, and a Return Materials Authorization (RMA) number will be assigned. This number will serve as a reference for you and helps facilitate and expedite the return process. FiberPlex requires that shipments be pre-paid and insured —unless otherwise authorized in advance.

IMPORTANT:

ANY SHIPMENT THAT IS NOT PRE-PAID OR IS SENT WITHOUT AN RMA NUMBER WILL NOT BE ACCEPTED.

Disposal

Disposal of Packing Materials

The packing materials have been selected with environmental and disposal issues in mind. All packing material can be recycled. Recycling packing saves raw materials and reduces the volume of waste. If you need to dispose of the transport packing materials, please try to use recyclable means.

Disposal of Used Equipment

Used equipment contains valuable raw materials as well as materials that must be disposed of professionally. Please return your used equipment via an authorized specialist dealer or via the public waste disposal system, ensuring any material that can be recycled is. Please take care that your used equipment cannot be abused. After having disconnected your used equipment from the mains supply, make sure that the mains connector and the mains cable are made useless.

Declarations of Conformity

Class A Equipment - FCC Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide a reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at their own expense.



Disclaimer

The information in this document has been carefully checked and is believed to be accurate at the time of publication. However, no responsibility is taken by us for inaccuracies, errors, or omissions, nor is any liability assumed for any loss or damage resulting either directly or indirectly from use of the information contained within it.

Introduction

Congratulations on your purchase of a Light Viper 1808/0808 fiber –optic audio snake; a lightweight, flexible breakthrough for professional sound production.

LightViper products are designed, engineered and manufactured by FiberPlex Inc., experts in fiber optics with decades of experience. Our work in audio and data communications products is known in US government applications worldwide. LightViper products combine our fiber optic technology with the highest standards in audio engineering.

The VIM-1808 / 0808

You have purchased the LightViper 1808/0808 system, an 8 x 8 line level analog / AES digital input fiber-optic transport system (snake). Instead of traditional heavy multi-conductor copper cable, LightViper fiber optic systems utilize lightweight, flexible, military tactical grade fiber-optic cable or duplex PVC and plenum rated fiber for installation use.

The Fiber Advantage

Fiber optics offer many advantages over copper:

- Transmits light rather than electrons
- Transmission over greater distances (more than 2 Km [1.25 mile])
- Complete electrical isolation
- Immunity to RFI and EMI
- Eliminates ground loop problems
- Can be routed overhead, through walls, or underground
- Avoids foot traffic while maintaining aesthetics

Functional Considerations

The Light Viper 1808/0808 is an active device. Because of this, there are some aspects of this new technology that require some slightly different thinking:

- The Light Viper 1808/0808 system requires AC Power at both the Stage (VIM-0808) and the console (VIM-1808)
- The 1808/0808 system contains (8) Line Level Analog inputs OR (8) AES digital inputs, and (8) analog AND (8) AES digital outputs. There are no microphone preamplifiers as with the 1832 system
- All inputs exit the snake at Line Level
- Input and Output flexibility may eliminate the need for some of your outboard gear
- The LightViper VIM-1808/0808 is an active device, therefore ***do not attempt to connect intercom into the returns***
- The returns in the VIM-1808/0808 cannot be “turned around” to provide (16) sends one way as with a traditional copper snake, as the electronics for the returns are contained in the VIM-1832.

Standard Components

In its standard configuration, the Light Viper 1808/0808 is made up of the following primary components.

- **VIM-1808** — The VIM-1808 contains the system clock. It can be placed at either end (head or tail) of the system. If using an external clock however, the VIM-1808 needs to be connected to this clock. The VIM-1808 and VIM-0808 are identical except that the VIM-1808 contains the system clock and an “external” clock input connector.
- **VIM-0808** — The VIM-0808 can be placed at either end (head or tail) of the system.

Fiber Cable (TFC-0000-04) — For live production, TFC-0000-04 tactical military grade fiber with TAC-4 Connectors is required between the VIM-1808 and VIM-0808. Neutrik OpticalCon® tactical fiber (TFC-0000-02-OC) is also available for similar applications. For installations where the fiber will be pulled through conduit, either VFC-0000-D (PVC fiber) or VFC-0000-DP (Plenum rated fiber) with ST connector terminations is recommended. There is also an option for a “Pulling Eye” which can be specified by adding an “E” to the part numbers above (VFC-0000-DE; VFC-0000-DPE). This option includes a strain relief and pulling eye on one end of the fiber optic cable.

Lightweight military “tactical grade” fiber ‘cable’ (TFC-0000-04) carries the digital signal between LightViper devices. Neutrik OpticalCon® tactical cable is also available. For installation use, either PVC or Plenum rated fiber is recommended (VFC-0000-D, VFC-0000-DP).

- **TAC-4 and OpticalCon® Panels** – (VPL-11, VPL-12 & VPL-13). These 1U rack panels include (1), (2) or (3) TAC-4 connectors respectively allowing for connection between the TAC-4 panel mount connector and the ST connectors on the VIM-1808/0808. Neutrik OpticalCon panel mount connectors can also be mounted on these panels rather than TAC-4 connectors. Specify by using the suffix “OC” (Ex. “VPL-11-OC). TAC-4 and Neutrik OpticalCon connectors can also be fit directly on the chassis of the VIM-1808/0808 system. In applications such as these, rack ears and VPL panels are not required. All LightViper units come standard with ST connectors unless otherwise specified.
- **Send / Return Cables (VCB-ADX, VCB-ADXF)** — These cables connect the VIM-1808/0808 to the analog inputs/outputs of your system. A variety of cables to connect to other digital consoles and devices are also available.

Optional Components

Additional components can be added to the Light Viper 1808/0808 for increased functionality.

- **Ethernet Control** – Add the optional ETH-1832 (pair) option to any 1808/0808 system, and control a variety of Ethernet based gear from the either position. Two additional fibers are required for the Ethernet option operation.
- **MD-3 Multi control interface translator** – In applications where you want RS-422, RS-232 or Midi control in a VIM-1808/0808 system, a pair of MD-3 devices will translated this control protocol into TTL data for input to / output of the “Control Circuit” connector on the VIM-1808 / 0808.

*****Please refer to page 13 for a complete list and photos of fiber-optic cable types as well as copper interface cables.***


Getting Started

Setting up and using your Light Viper 1808/0808 system is a quick and simple process. Just follow these steps:

1. Place the VIM-1808 in a rack near your signal source, and place the VIM-0808 in a rack near your signal destination and connect AC power
2. Connect and run the Fiber between the two units, and check that the Sync light status is “green” on both units
3. Connect the sends & returns (inputs & outputs) on both units.
4. Connect the analog fan out or digital cables to both units.
5. Input signals and check for audio in both directions.

NOTE: the signal output of the VIM-1808 & VIM-0808 on the analog outputs is line level. When connecting this system into a console or other device, use line level inputs or engage input pads to achieve optimal signal-to-noise ratio.

The more advanced functions of the Light Viper VIM-1808/0808 (control, clocks, etc.) are addressed later in this manual.

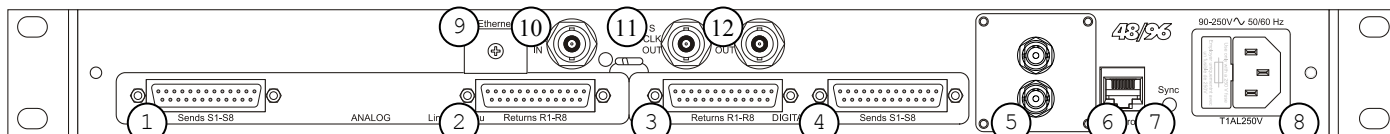

VIM-1808

The VIM-1808 and VIM-0808 are identical with 2 exceptions – the VIM-1808 contains the native system clock and an external clock input, and the VIM-0808 does not. Therefore, only the VIM-1808 is pictured in this document

① Analog Sends (outputs) – The (8) analog line level outputs on the VIM-1808 are connected via (1) DB25 connectors, (8) channels per DB25 connector.

② Analog Returns (inputs) – The (8) returns are connected via a single DB25 connector. Returns are line level.

③ Digital Returns (inputs) – The (8) digital returns are connected via a single DB25 connector. Returns are all AES digital.

④ Digital Sends (outputs) – The (8) AES digital outputs on the VIM-1832 are connected via (1) DB25 connectors, (8) channels per DB25 connector.

⑤ Fiber Connections – The VIM-1808 contains a single primary pair of fiber connectors. Always be certain to use appropriate fiber and connectors. LightViper systems use multimode fiber. Single mode optics are available on a custom basis for situations where single mode fiber may already exist.

⑥ Control Circuit Connector – This RJ45 connector provides (3) bi-directional CMOS or TTL data lines (up to 38.4KHz from VIM-0808 to VIM-1808 and 2MHz from VIM-1808 to VIM-0808) plus voltage and GND. This connector is used in conjunction with DGL-422 cables for transporting Yamaha control, or with MD3 units to transport RS-422, RS-232 or MIDI. THIS IS NOT AN ETHERNET CONNECTOR – CONNECTING AN ETHERNET DEVICE TO THIS CONNECTOR COULD DAMAGE THE DEVICE. The pin outs for this connector are detailed in the appendix. Most CMOS or TTL functions / equipment can be adapted to make use of this connector.

⑦ Sync LED – This LED indicates the status of the fiber-optic link between the VIM-1808 and VIM-0808. It has three states; SOLID RED indicates there is no sync present; ALTERNATING RED & GREEN indicates the unit is searching for sync; SOLID GREEN indicates sync is present (optical link) and OFF indicates no power.

⑧ Power Connector / Fuse – The AC power connection to the VIM-1808 & VIM-0808 are made via the supplied IEC power cords. The internal power supply can accept 90-260V at either 50 or 60 Hz> The power fuse is a 5x20mm, 1A Slo-Blo. Only replace the fuse with an exact match. If after replacement the fuse blows again, contact Fiberplex for service.


⑨ Optional (ETH-1832) Ethernet connector

⑩ Word Clock external input

⑪ Analog / digital switch – chooses between analog line level and digital returns

⑫ Word Clock / Super Clock output Using the Light Viper EF-2

Functional Block Diagram

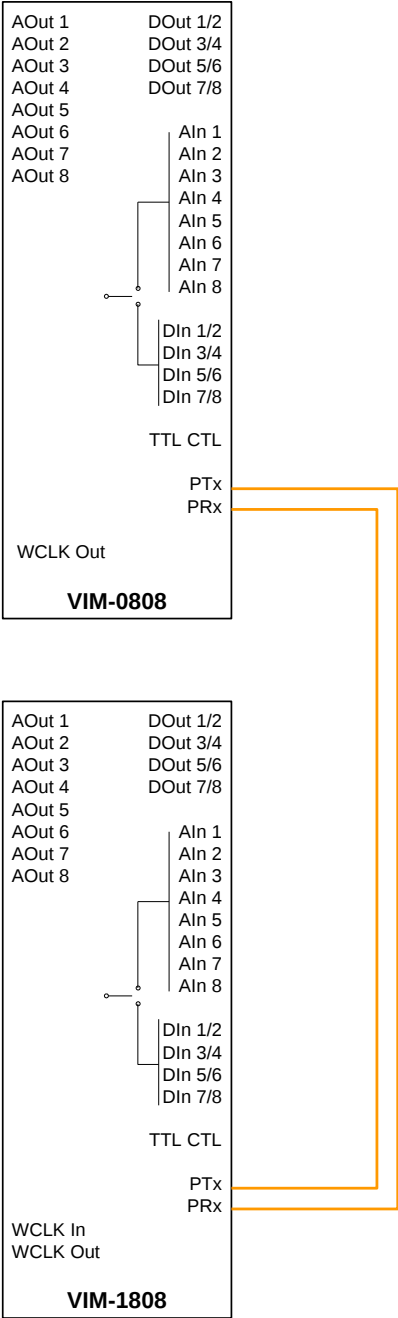

Fiber Options

Tactical grade military fiber - (TAC-4) is used for live production applications (P/N TFC-0000-04). Weighing 8.4 lbs.(12.6kg) for(300)feet, this cable contains (4) fibers and therefore it is capable of carrying the signals of (2) systems on a single cable. The TAC-4 connectors are hermaphroditic and can be connected to one another. Multimode fiber can transport signals up to 2km (1.25 miles).



TAC-4

Neutrik OpticalCon® Fiber – This fiber cable contains (2) fibers and is also a tactical grade fiber (P/N TFC-0000-02OC).



Neutrik OpticalCon
Fiber Cable & Panel
Mount Connector

PVC fiber – PVC duplex fiber contains (2) fibers. Plenum rated fiber is also available. The installer can terminate the fiber themselves, or Fiberplex can supply it pre-terminated. This fiber is also available with a strain relief and “pulling eye” which reduces on site labor.



Plenum Install Fiber

LightViper VIM-1808 / 0808 Specifications

• 8 x 8 fiber optic transport system • Cable runs over 1.25 miles with no loss • Rugged, lightweight fiber cable • 24 bit / 96kHz sampling (24/48k with ext. input)	• Analog line level OR AES digital input • Simultaneous analog / AES3 digital outputs • Heavy gauge steel construction • Extended range and flexibility means limitless routing options
--	--

1. General Specifications

Total Harmonic Distortion	Less than 0.01%	1 KHz @ +4 dBu
Frequency Response	± 0.5 dB	20-20kHz @ +16 dBu
Dynamic Range	102 dB	
Crosstalk	5 dB above noise floor	
Sampling Rate	24 bit / 96kHz or 24 bit / 48 kHz	
Latency	630 μs one way, analog input to digital output, 20μs one way, digital input to digital output.	
Operating Temp	0 to +50°C ambient temperature.	
Sync LED	LED (green) indicates optical link OK, LED (red) indicates problem with optical link, LED (off) indicates no power.	
AC Power	Universal 90-250 VAC, 50/60 Hz, IEC connector with fuse	
Max Current Rating	VIM-1808 / VIM-0808	0.473 mA @ 90V
On / Off Control Date +	RJ-45 connector for logic level control, CMOS or TTL at 2 MHz max per channel.	
Dimensions	VIM-1808 / VIM-0808	1 Rack Unit X 6.5" Deep
Weight	VIM-1808 / VIM-0808 300 ft Fiber Cable (tactical)	6.5 lbs 6 lbs

*1-Hum & Noise are measured with an AES17 compliant filter at 20 kHz. Temperature condition @+10 - +25° C.

2.1 Input Characteristics

Connection	Gain Setting	Voltage Gain ^{*2}	Sensitivity ^{*3}	S/N ref +0dBu	Overload	Clipping	Input Impedance	
Analog Sends 1-8 ^{*4}	0	0(0 dB)	1.65 Vrms	-83 dBu	+16 dBu	+19 dBu	XLR TRS	1.8 KΩ 10 KΩ
Analog Returns 1-8	n/a	0(0 dB)	1.65 mVrms	-83 dBu	+16 dBu	+19 dBu	2 KΩ	
Digital sends & Returns 1-8 (Mixer End)	AES3 Digital							

*1-Hum & Noise are measured with an AES17 compliant filter at 20 kHz. Temperature condition @+10 - +25° C. *2-0dBu is referenced to 0.775Vrms. *3-Sensitivity is the lowest level that will produce an output of +4dBu (1.23V).

2.2 Output Characteristics

Connection	Actual Source Impedance	For Use With Nominal	Output Level ^{*2}		Connector ^{*1}
			Nominal	Max	
Analog Returns 1-8 (Stage)	150 Ω	600 Ω Lines	+4 dBu (1.23)	+19 dBu (7 V)	DB-25, Tascam™ DA-88 pinout, 8
Analog Sends 1-8 (Mixer)	150 Ω	600 Ω Lines	+4 dBu (1.23)	+19 dBu (7 V)	DB-25, Tascam™ DA-88 pinout, 8
Digital Sends & Returns 1-8	AES3 Digital				DB-25, 8 channels per connector

*1-All XLR connectors are balanced. *2-0 dBu is referenced to 0.775 Vrms.



2.3 Optical Characteristics

Connector ^{*1}	Installation Tension	Operating Tension	Min Bend Radius	Crush Resistance	Weight
Fiber-Optic Cable ^{*2}	400 lbs	130 lbs	3.7"	228 lb/in ²	19 lbs / 1000'
Optical Fiber ^{*3}	Attenuation	Bandwidth	Numerical Aperture	System Optical Data Rate	System Operating Distance
	1 dB/Km @1300 nm	500 MHz/Km @ 1300	0.275	122 Mbs	2 Km (1.25 mi)

*1-TAC-4 4 channel SMPTE compliant, *2-Four Channel Tactical Break Out Cable, 0.30"(7.5mm) Outer Diameter, Kevlar™ Strength Member *3-Graded Index, Multimode, Dual Window (850/1300nm)


ANALOG - DB25 Cable Pin Outs

1.	Ch. 8 +	14.	Ch. 8 -
2.	Ch. 8 G	15.	Ch. 7 +
3.	Ch. 7 -	16.	Ch. 7 G
4.	Ch. 6 +	17.	Ch. 6 -
5.	Ch. 6 G	18.	Ch. 5 +
6.	Ch. 5 -	19.	Ch. 5 G
7.	Ch. 4 +	20.	Ch. 4 -
8.	Ch. 4 G	21.	Ch. 3 +
9.	Ch. 3 -	22.	Ch. 3 G
10.	Ch. 2 +	23.	Ch. 2 -
11.	Ch. 2 G	24.	Ch. 1 +
12.	Ch. 1 -	25.	Ch. 1 G
13.	Unused		

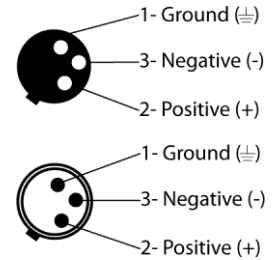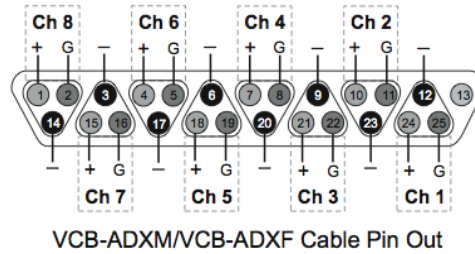



ANALOG Connector Pin Outs

1.	Ch. 8 +	14.	Ch. 8 -
2.	Ch. 8 G	15.	Ch. 7 +
3.	Ch. 7 -	16.	Ch. 7 G
4.	Ch. 6 +	17.	Ch. 6 -
5.	Ch. 6 G	18.	Ch. 5 +
6.	Ch. 5 -	19.	Ch. 5 G
7.	Ch. 4 +	20.	Ch. 4 -
8.	Ch. 4 G	21.	Ch. 3 +
9.	Ch. 3 -	22.	Ch. 3 G
10.	Ch. 2 +	23.	Ch. 2 -
11.	Ch. 2 G	24.	Ch. 1 +
12.	Ch. 1 -	25.	Ch. 1 G
13.	Unused		

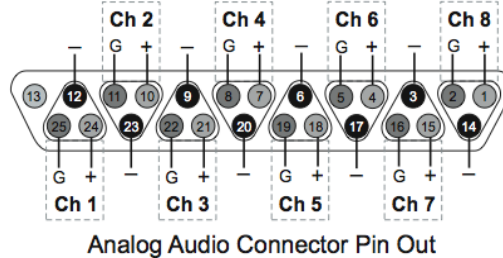


Digital Connector Pin Outs

1.	Ch 1&2 +	14.	Ch 1&2 -
2.	Ch. 3&4 +	15.	Ch. 3&4 -
3.	Ch 5&6 +	16.	Ch. 5&6 -
4.	Ch. 7&8 +	17.	Ch. 7&8 -
5.	Ch. 9&10 +	18.	Ch. 9&10 -
6.	Ch. 11&12 +	19.	Ch. 11&12 -
7.	Ch. 13&14 +	20.	Ch. 13&14 -
8.	Ch 15 & 16	21.	Ch. 15&16 -
9.	Unused	22.	Gnd.
10.	Gnd.	23.	Unused
11.	Unused	24.	Gnd.
12.	Gnd.	25.	Gnd.
13.	Gnd.		

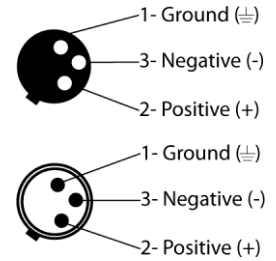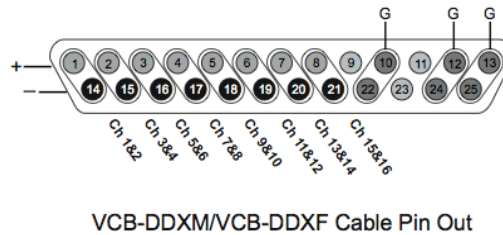


Digital Connector Pin Outs

1.	Ch 1&2 +	14.	Ch 1&2 -
2.	Ch. 3&4 +	15.	Ch. 3&4 -
3.	Ch 5&6 +	16.	Ch. 5&6 -
4.	Ch. 7&8 +	17.	Ch. 7&8 -
5.	Ch. 9&10 +	18.	Ch. 9&10 -
6.	Ch. 11&12 +	19.	Ch. 11&12 -
7.	Ch. 13&14 +	20.	Ch. 13&14 -
8.	Ch 15 & 16	21.	Ch. 15&16 -
9.	Unused	22.	Gnd.
10.	Gnd.	23.	Unused
11.	Unused	24.	Gnd.
12.	Gnd.	25.	Gnd.
13.	Gnd.		

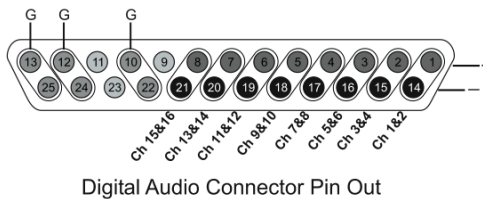


Control Circuits RJ-45 Pin Outs

1.	GND
2.	TX1
3.	TX2
4.	TX3
5.	RX1
6.	RX2
7.	RX3
8.	VCC +5VDC

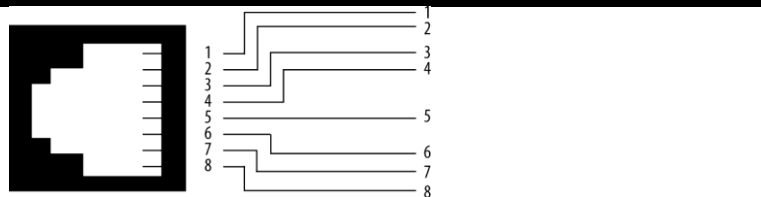

Fiber Connection Plates

Each fiber connection on LightViper components can be configured with any of the plates in the diagram. The plates accommodate different fiber connector types either singly. Four different ST plates accommodate 1, 2, 3, or 4 ST connections. A blank plate should always be installed in an unused connection bay.

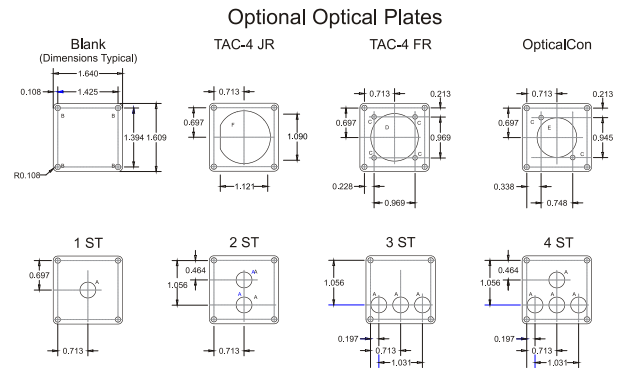


TAC-4 Installation Instructions









When using TAC-4 panel mount connectors:

Due to the hermaphroditic nature of the TAC-4 connector, channels 1 & 4 and 2 & 3 are crossed by necessity. Therefore, pins 1 & 2 should always be connected to connectors marked TX and pins 3 & 4 should always be connected to pins marked RX. Pins 1 & 4 are always paired together and pins 2 & 3 will always be paired together.

Important Note: A single TAC-4 connector and cable contains (4) fibers and can transport both pairs of fiber inputs/outputs of the EF-2 on a single connector / cable. If using Neutrik OpticalCon, two cables / connectors are required, one for each pair, as the OpticalCon cable and connectors contain (2) fibers. When using ST fiber connectors on the chassis of the EF-2, the ST connectors may be mounted on the rear of the unit, or alternatively on the front panel of the unit.

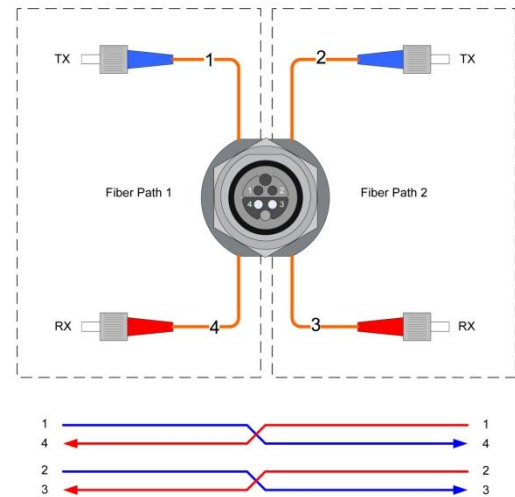

65

    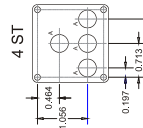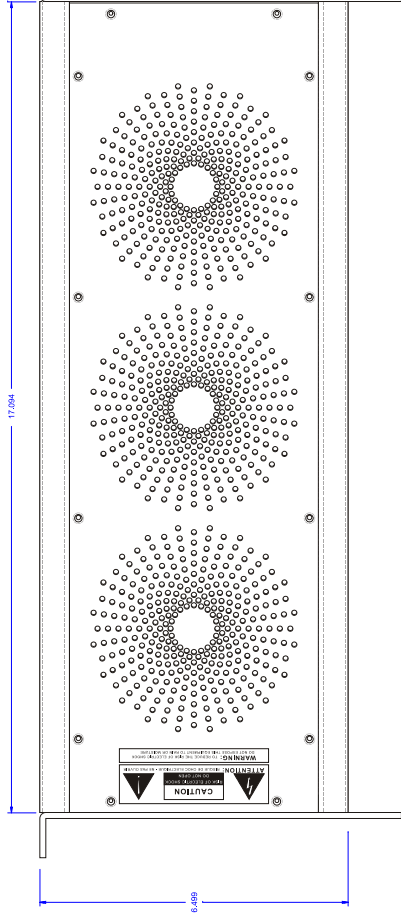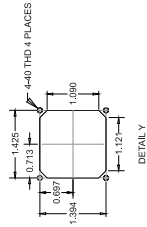 

UNLESS OTHERWISE SPECIFIED		ENGR.		HBO III	DATE:	4/7/2006
DIMENSIONS IN INCHES		DRAWN		HBO III	DATE:	4/7/2006
TOLERANCE		REVIEW			DATE:	
FRACTIONS 1/4, 1/8, 1/16		CHECKED			DATE:	
X.XX, 4.0, 0.1						
X.XXX, 4.0, 0.05						
ANGLES						
MATERIAL:		#16 (0.059) CRS				
FINISH:						

MADE IN THE USA BY:
fiberplex INCORPORATED www.lightviper.com • 301.604.0100 • sales@lightviper.com
LV1808UM 9/2007

sound@the speed of light
LightViper